

# USER GUIDE



**EZ Switch™ 10/100**  
**16/24-Port Unmanaged Fast Ethernet Switches**

**SMCFS1601/SMCFS2401**



# **EZ Switch™ 10/100 User Guide**

---

From SMC's EZ line of low-cost workgroup LAN solutions

**SMC**<sup>®</sup>

**N e t w o r k s**  
20 Mason

Irvine, CA 92618

Phone: (949) 679-8000

April 2011  
SMC-UG-0411-01

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2011 by

SMC Networks, Inc.

20 Mason

Irvine, CA 92618

All rights reserved

**Trademarks:**

SMC is a registered trademark; and EZ Switch, TigerStack and TigerSwitch are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

# WARRANTY AND PRODUCT REGISTRATION

To register SMC products and to review the detailed warranty statement, please refer to the Support Section of the SMC Website at <http://www.smc.com>.

# COMPLIANCES AND SAFETY STATEMENTS

## **FCC - CLASS A**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ◆ This device may not cause harmful interference.
- ◆ This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **CE MARK DECLARATION OF CONFORMANCE FOR EMI AND SAFETY (EEC)**

This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.



# ABOUT THIS GUIDE

## PURPOSE

This guide details the hardware features of the switch, including the physical and performance-related characteristics, and how to install the switch.

## AUDIENCE

The guide is intended for use by network administrators who are responsible for installing and setting up network equipment; consequently, it assumes a basic working knowledge of LANs (Local Area Networks).

## CONVENTIONS

The following conventions are used throughout this guide to show information:



---

**NOTE:** Emphasizes important information or calls your attention to related features or instructions.

---



---

**CAUTION:** Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.

---



---

**WARNING:** Alerts you to a potential hazard that could cause personal injury.

---

## REVISION HISTORY

This section summarizes the changes in each revision of this guide.

### APRIL 2011 REVISION

This is the first revision of this guide.





# CONTENTS

	<b>WARRANTY AND PRODUCT REGISTRATION</b>	<b>4</b>
	<b>COMPLIANCES AND SAFETY STATEMENTS</b>	<b>5</b>
	<b>ABOUT THIS GUIDE</b>	<b>7</b>
	<b>CONTENTS</b>	<b>9</b>
<b>1</b>	<b>INTRODUCTION</b>	<b>11</b>
	Overview	11
	Features	11
	IEEE 802.1p QoS	12
<b>2</b>	<b>HARDWARE DESCRIPTION</b>	<b>15</b>
	Front Panel	15
	Port and System Status LEDs	15
	RJ-45 Ports	16
	Rear Panel	16
	Grounding Terminal	16
	AC Power Socket	17
<b>3</b>	<b>INSTALLING THE SWITCH</b>	<b>19</b>
	Package Contents	19
	Precautions	20
	Safety Requirements	20
	Location Requirements	20
	Installation	21
	Desktop Installation	21
	Rack Installation	22
	Connecting to Ground	23

	Powering On	25
	Connecting Network Devices	26
	Cabling Guidelines	26
	Connecting to PCs, Servers, Hubs and Switches	26
<b>A</b>	<b>TROUBLESHOOTING</b>	<b>27</b>
	Diagnosing Switch Indicators	27
	The Power LED is Off	27
	The Link/Act LED is Off when a Device is Connected to the Corresponding Port	27
	Power and Cooling Problems	27
	Installation	28
<b>B</b>	<b>SPECIFICATIONS</b>	<b>29</b>
	Physical Characteristics	29

# 1

## INTRODUCTION

---

### OVERVIEW

The EZ Switch 10/100 SMCFS1601 and SMCFS2401 switches provide 16 or 24 10/100 Mbps auto-negotiating RJ-45 ports. Each port on the switches support auto MDI/MDI-X, which eliminates the need for crossover cables or uplink ports. The switches are plug-and-play; any port can be connected to a server, a hub, or a switch, using straight-through or crossover cable.

### FEATURES


- ◆ Complies with IEEE 802.3, IEEE 802.3u standards
- ◆ 16/24 10/100 Mbps auto-negotiating RJ-45 ports supporting Auto-MDI/MDIX
- ◆ Supports IEEE 802.3x flow control for full-duplex mode and backpressure for half-duplex mode
- ◆ LED indicators for monitoring power, link, activity, speed
- ◆ Rack-mountable steel case
- ◆ Internal power supply
- ◆ Support for IEEE 802.3az Energy-Efficient Ethernet, which can save up to 49% of power consumption
- ◆ Support for IEEE 802.1p QoS

## IEEE 802.1P QoS

The SMCFS1601 and SMCFS2401 switches support 802.1p priority queuing Quality of Service, which is an implementation of the IEEE 802.1p standard. With the 802.1p QoS function, network traffic that requires high priority, such as VoIP (Voice-over Internet Protocol), web browsing applications or video conferencing, can be forwarded before other traffic. The switches have separate hardware queues for each physical port, when packets are received with an 802.1p priority tag, they are sent to the appropriate output queue.

The illustration below shows how 802.1p priority queuing is implemented on the switches.

**Figure 1: Mapping QoS on the Switch**

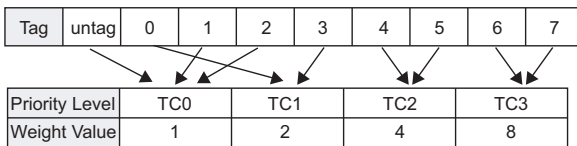

There are four priority levels labeled TC0, TC1, TC2 and TC3. The untagged packets and the eight IEEE 802.1p priority tags (defined by the standard) are mapped to the four priority queues on the switch. TC3 has the highest priority of the four priority queues while TC0 has the lowest priority. The untagged packets and eight priority tags, specified in IEEE 802.1p, are mapped to the switch's priority tags as follows:

- ◆ Untagged packets, and packets with priority tag 1 and 2 are assigned to the switch's TC0 level queue.
- ◆ Packets with priority tag 0 and 3 are assigned to the switch's TC1 level queue.
- ◆ Packets with priority tag 4 and 5 are assigned to the switch's TC2 level queue.
- ◆ Packets with priority tag 6 and 7 are assigned to the switch's TC3 level queue.

The SMCFS1601 and SMCFS2401 switches use Weighted Robin Round (WRR) for scheduling. The WRR queue-scheduling algorithm schedules all the queues in turn with every queue assured a certain service time. For both WFQ and WRR mode, the default weight values of TC0, TC1, TC2 and TC3 are 1:2:4:8.



# 2


## HARDWARE DESCRIPTION

This chapter describes the front panel, rear panel, and LED indicators of the switch. The SMCFS1601 and SMCFS2401 only differ in the number of ports. All figures in this guide are of the SMCFS2401.

### FRONT PANEL

The front panel of SMCFS2401 consists of switch LED indicators, and 24 10/100 Mbps RJ-45 ports.

**Figure 2: SMCFS2401 Switch Front Panel**



### PORT AND SYSTEM STATUS LEDs

The switches include a display panel for key system and port indications that simplify installation and network troubleshooting. The LEDs, which are located on the front panel, are described in the following table.

**Table 1: System and Port Status LEDs**

LED	Condition	Status
Power	On Green	The internal power supply is operating normally.
	Off	The unit has no power connected.
Link/Act	On/Flashing Green	Port has established a valid network connection. Flashing indicates activity.
	Off	There is no valid link on the port.

**Table 1: System and Port Status LEDs (Continued)**

LED	Condition	Status
100Mbps (SMCFS2401 only)	On Green	The port is operating at 100 Mbps.
	Off	The port is operating at 10 Mbps.

## RJ-45 PORTS

The switch contains 16/24 100BASE-TX RJ-45 ports. All ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs.


Each of these ports support auto-negotiation, so the optimum transmission mode (half or full duplex), and data rate (10 or 100 Mbps) is selected automatically.

Each port also supports IEEE 802.3x auto-negotiation of flow control, so the switch can automatically prevent port buffers from becoming saturated.

## REAR PANEL

The rear panel of the switch features a power socket and a grounding terminal.

**Figure 3: SMCFS2401 Switch Rear Panel**

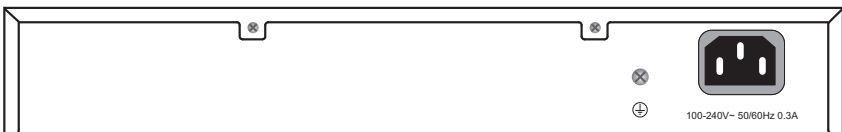

## GROUNDING TERMINAL

The switch already includes a lightning protection mechanism. However, you can also ground the switch through the PE (Protective Earth) wire of an AC power cord, or with a grounding cable. For detail information, see ["Connecting to Ground" on page 23](#).



## AC POWER SOCKET

Connect the female connector of the power cord here, and the male connector to the AC power outlet. Make sure the voltage of the power supply meets the requirement of the input voltage.



# 3

## INSTALLING THE SWITCH

Before installing the switch, verify that you have all the items listed under "Package Contents." If any of the items are missing or damaged, contact your local SMC distributor. Also be sure you have all the necessary tools and cabling before installing the switch.

---

### PACKAGE CONTENTS

The following contents should be found in your package:

- ◆ One SMCFS1601 or SMCFS2401 Switch
- ◆ One power cord
- ◆ This User Guide
- ◆ Rackmount Kit
- ◆ Quick Installation Guide
- ◆ SMC Warranty Card
- ◆ Four rubber foot pads

---

## PRECAUTIONS

To ensure a long-term and stable performance of the switch, pay attention to the following before installation.

### SAFETY REQUIREMENTS

- ◆ Before cleaning the switch, disconnect the power supply. Do not clean the switch using a wet cloth, and never use any other liquid for cleaning.
- ◆ Take waterproof measures during storage, transportation and operation of the equipment.
- ◆ Use only the power cord provided with the switch.
- ◆ Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.
- ◆ Do not push any objects into the openings of the switch.
- ◆ Ensure the vent holes are well ventilated and unblocked.
- ◆ Do not open or remove the cover of the switch.

### LOCATION REQUIREMENTS

When you choose a location for the switch, follow these guidelines:

- ◆ Install the switch on a flat and stable surface that can support the entire weight of the switch with all fittings.
- ◆ Locate the switch far from strong electromagnetic field generators (such as motors), vibration, dust, and direct exposure to sunlight.
- ◆ To ensure adequate air flow around the switch. At least 10 cm (4 inches) of space at the front and rear of the switch is needed for ventilation.
- ◆ Make sure that the switch will be accessible and that the cables can be easily connected.

- ◆ Position the switch away from water and moisture sources, be sure to provide an acceptable temperature and humidity operating environment.

## INSTALLATION

This switch can be either installed in a standard 19-inch mountable rack or located on a desktop.




**CAUTION:** Please unplug the power cord before installing or removing the switch.

### DESKTOP INSTALLATION

To install the switch on the desktop, follow these steps:

1. Set the switch on a flat surface strong enough to support the entire weight of the switch with all fittings.
2. Remove the adhesive backing papers from the rubber feet.
3. Turn the switch over and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the switch.

**Figure 4: Attaching Rubber Feet**

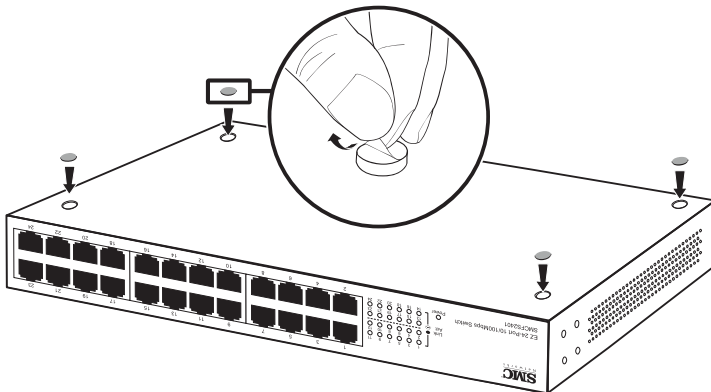

4. Upright the switch and set in the desired location, making sure there is enough ventilation space on all sides for proper air flow
5. Connect the switch to a power source with the provided power cord. See “Powering On” on page 25.




**CAUTION:** Avoid placing anything heavy on the switch.

## RACK INSTALLATION

To install the switch in an EIA standard-sized, 19-inch rack, follow the instructions described below:


1. Secure the supplied rack-mounting brackets to each side of the switch with supplied screws, as illustrated in the following figure.

**Figure 5: Attaching Brackets**

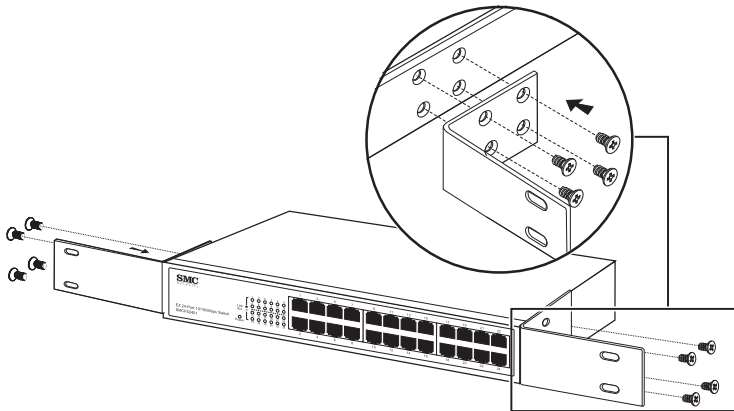

2. Use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

**Figure 6: Mounting the Switch**

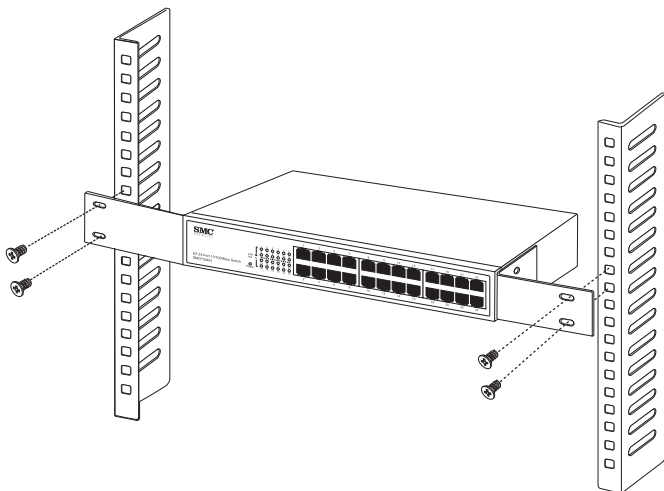

3. Connect the switch to a power source with the provided power cord. See ["Powering On"](#) on page 25.

## CONNECTING TO GROUND


Connecting the switch to ground protects against lightning over-voltage and over-current of the switch, which is also a necessary measure to protect the body from electric shock.

In different environments, the switch may be grounded differently. The following instructs you to connect the switch to the ground in two ways; connecting to a grounding bar, or connecting to ground through the power cord. Connect the switch to ground in the best way according to your specific operating environment.

### CONNECTING TO A GROUNDING BAR

When the switch is installed in an equipment room, where a grounding bar is available, you are recommended to connect the switch to the grounding bar as shown in the following figure.

**Figure 7: Connecting to a Grounding Bar**

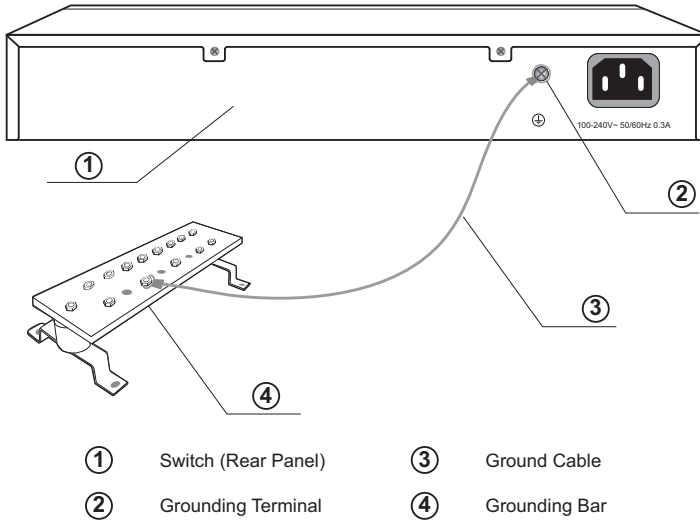


**NOTE:** The grounding bar and grounding cable are not provided with the product.

### CONNECTING TO GROUND THROUGH THE POWER SUPPLY

If the switch is installed in a normal environment, it can be grounded through the PE (Protective Earth) wire of the AC power supply, as shown in the following figure.



**Figure 8: Connecting to Ground Through the Power Supply**

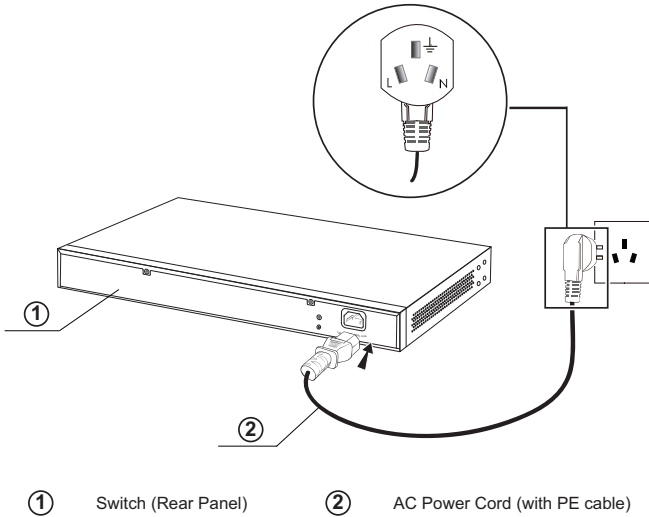

**NOTE:** The figure illustrates the application and principle. The power plug in the package and the socket in your situation will comply with regulations in your country, so they may differ from the figure above.

**NOTE:** If you intend to connect the switch to ground through the PE (Protective Earth) wire of the AC power cord, make sure the PE wire in the electrical outlet is well grounded in advance.

## POWERING ON

The SMCGS1601 and SMCGS2401 switches are powered by connecting to an AC power supply using a power cord. When powering on the switch, it automatically initializes and the LED indicators respond as follows:

1. All of the LED indicators flash momentarily for one second, which represents a resetting of the system.
2. The Power LED indicator turns on green.

---

## CONNECTING NETWORK DEVICES

The switches are designed to be connected to 10, or 100 Mbps network cards in PCs and servers, as well as to other switches and hubs.

### CABLING GUIDELINES

The RJ-45 ports on the switch support automatic MDI/MDI-X pinout configuration, so you can use standard straight-through twisted-pair cables to connect to any other network device (PCs, servers, switches, routers, or hubs).

Each device requires an unshielded twisted-pair (UTP) cable with RJ-45 connectors at both ends. Use Category 5 or better for 100BASE-TX connections, and Category 3 or better for 10BASE-T connections.

### CONNECTING TO PCs, SERVERS, HUBS AND SWITCHES

1. Attach one end of a twisted-pair cable segment to the device's RJ-45 connector.
2. Attach the other end of the cable segment to an available port on the switch.

Make sure each twisted pair cable does not exceed 100 meters (328 ft) in length.

3. As each connection is made, the relevant port LED (on the switch) corresponding to each port will turn on green to indicate that the connection is valid.

---

## DIAGNOSING SWITCH INDICATORS

### THE POWER LED IS OFF

- ◆ Make sure the AC power cord is connected to the switch and power source properly.
- ◆ Make sure the power source is ON.

### THE LINK/ACT LED IS OFF WHEN A DEVICE IS CONNECTED TO THE CORRESPONDING PORT

- ◆ Make sure that the cable connectors are firmly plugged into the switch and the device.
- ◆ Make sure the connected device is turned on and working properly.
- ◆ The cable must be less than 100 meters long (328 feet).
- ◆ Check the port on the attached device and cable connections for possible defects. Replace the defective cable if necessary.

---

## POWER AND COOLING PROBLEMS

If the power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply. However, if the unit powers off after running for a while, check for loose power connections, power losses or surges at the power outlet. If you still cannot isolate the problem, the internal power supply may be defective.

---

## **INSTALLATION**

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

# B

## SPECIFICATIONS

---

### PHYSICAL CHARACTERISTICS

#### STANDARDS

IEEE 802.3 10BASE-T

IEEE 802.3u 100BASE-TX

#### TOPOLOGY

Star

#### PROTOCOL

CSMA/CD

#### DATA TRANSFER RATE

Ethernet: 10 Mbps (half duplex)

Ethernet: 20 Mbps (full duplex)

Fast Ethernet: 100 Mbps (half duplex)

Fast Ethernet: 200 Mbps (full duplex)

#### NETWORK MEDIA (CABLE)

10BASE-T: UTP Category 3, 4, 5 cable (maximum 100 m)

EIA/TIA-568 100 STP (maximum 100 m)

100BASE-TX: UTP Category 5, 5e cable (maximum 100 m)

EIA/TIA-568 100 STP (maximum 100 m)

#### NUMBER OF PORTS

16/24 10/100 Mbps auto-negotiating RJ-45 ports

## **LED INDICATORS**

POWER, Link/Act, 100Mbps (SMCFS2401 only)

## **TRANSFER METHOD**

Store-and-Forward

## **MAC ADDRESS LEARNING**

Automatically learning, automatically aging

## **FRAME FILTER RATE**

10BASE-T: 14881 pps/port

100BASE-TX: 148810 pps/port

## **FRAME FORWARD RATE**

10BASE-T: 14881 pps/port

100BASE-TX: 148810 pps/port

## **SWITCHING DATABASE**

8K MAC address entries

## **BUFFER MEMORY**

256 Kbytes/device

## **SWITCHING CAPACITY**

SMCFS1601: 3.2 Gbps

SMCFS2401: 4.8 Gbps

## **THROUGHOUT**

SMCFS1601: 2.4 Mpps

SMCFS2401: 3.6 Mpps

## **POWER REQUIREMENT**

SMCFS1601/2401: 100 to 240 V, 50-60 Hz, 0.3A

## **DIMENSIONS**

29.4 x 18.0 x 4.4 cm (11.6 x 7.1 x 1.73 in.)

## **WEIGHT**

SMCFS1601: 1.287 Kg (2.83 lbs)

SMCFS2401: 1.321 Kg (2.9 lbs)

## **FEATURE**

Jumbo Frames: 9 KBytes

## **TEMPERATURE**

Operating: 0 to 40 °C (32 to 104 °F)

Storage: -40 to 70 °C (-40 to 158 °F)

## **HUMIDITY**

Operating: 10% to 90% (non-condensing)

Storage: 5 to 90 °C (non-condensing)

**Headquarters &  
Sub-Sahara Africa Office**

No. 1, Creation Rd. III  
Hsinchu Science Park  
Taiwan 30077  
Tel: +886 3 5770270  
Fax: +886 3 5780764

**Asia-Pacific Office**

1 Coleman Street  
#07-09, The Adelphi  
Singapore 179803  
Tel: +65-63387667  
Fax: +65-63387767

**Europe & N. Africa Office**

C/Fructuós Gelabert 6-8, 2<sup>a</sup>, 2<sup>a</sup>  
Edificio Conata II  
08970 Sant Joan Despí  
Barcelona, Spain  
Tel: +34 93 477 4920

**Middle East Office**

Office No. 416, Le Solarium Bldg  
Dubai Silicon Oasis  
Dubai, U.A.E.  
Tel: +971-4-3564800  
Fax: +971-4-3564801

**North America Office**

20 Mason  
Irvine CA 92618 U.S.A.  
Tel: +1 (949) 679-8000

**SMC NETWORKS TECHNICAL SUPPORT**

From Singapore in English and 中文 (Mon.-Fri. 9AM to 5 PM)

Tel: +65-63387667, Ext. 4

From the United Arab Emirates in English (Sun.-Thu. 9AM to 6 PM)

Tel: +971 800 222866/+971 4 3564810

From U.S.A. and Canada (24 hours a day, 7 days a week)

Tel: +1 (800) SMC-4-YOU/+1 (949) 679-8000 Fax: +1 (949) 679-1481

**English:** Technical Support information available at [www.smc.com](http://www.smc.com)

**English:** (for Asia-Pacific): Technical Support information at [www.smc-asia.com](http://www.smc-asia.com)

**English:** (for Middle East): Technical Support information at [muneer@smc-asia.com](mailto:muneer@smc-asia.com)

**Deutsch:** Technischer Support und weitere Information unter [www.smc.com](http://www.smc.com)

**Español:** En [www.smc.com](http://www.smc.com) Ud. podrá encontrar la información relativa a servicios de soporte técnico

**Français:** Informations Support Technique sur [www.smc.com](http://www.smc.com)

**Português:** Informações sobre Suporte Técnico em [www.smc.com](http://www.smc.com)

**Italiano:** Le informazioni di supporto tecnico sono disponibili su [www.smc.com](http://www.smc.com)

**Svenska:** Information om Teknisk Support finns tillgängligt på [www.smc.com](http://www.smc.com)

**Nederlands:** Technische ondersteuningsinformatie beschikbaar op [www.smc.com](http://www.smc.com)

**Polski:** Informacje o wsparciu technicznym sa dostepne na [www.smc.com](http://www.smc.com)

**Čeština:** Technická podpora je dostupna na [www.smc.com](http://www.smc.com)

**Magyar:** Műszaki támogat információ elérhető -on [www.smc.com](http://www.smc.com)

简体中文: 技术支持讯息可通过[www.smc-prc.com](http://www.smc-prc.com)查询

繁體中文: 產品技術支援與服務請上 [www.smcnetworks.com.tw](http://www.smcnetworks.com.tw)

ไทย: สามารถหาข้อมูลทางด้านเทคนิคได้ที่ [www.smc-asia.com](http://www.smc-asia.com)

한국어: 기술지원관련 정보는 [www.smcnetworks.co.kr](http://www.smcnetworks.co.kr) 을 참고하시기 바랍니다

**INTERNET**

E-mail address: [www.smc.com](http://www.smc.com) → Support → By email

Driver updates: [www.smc.com](http://www.smc.com) → Support → Downloads